

Standard Premachining for Hinges

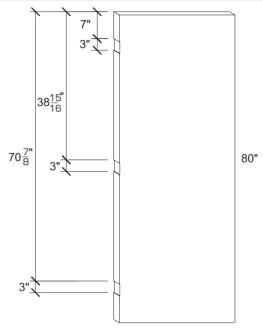


The location of the hinges varies according to the height. Take measurements from the top of the door.

Location according to height			
80" door	7″	38-15/16″	70-7/8″
84" door	7″	40-15/16"	74-7/8″
96" door	7″	46-15/16"	86-7/8"

Hinge

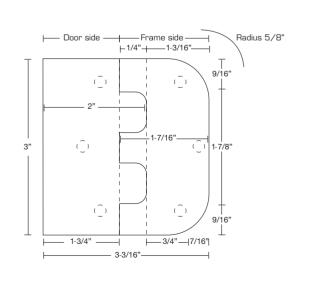

Hole drilled for handle and dead bolt

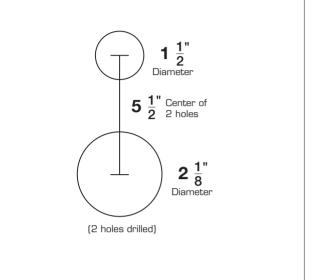

Hole for Handle

